



WIRING DIAGRAM LEGEND		
	Live	L
	Earth	E
	Neutral	N
	Switched Live	SL
	Switched Live	SL
	Common	C
	Hot Water	HW
	Central Heating	CH

4IE TERMINAL LEGEND		
N	Supply - Neutral	N
L	Supply - Live	L
1	Load - Live	L
2	Common	COM
3	Normally Open	NO
4	Normally Closed	NC

Note: If a UFH zone valve is not required or if it is connected directly to the UFH wiring centre, then the wiring connection from boiler SL on the wiring centre would go into terminal 13, instead of terminal 9.

